


BIRD SPIDERTM from **BIRD•B•GONE**, INC


Installation Instructions

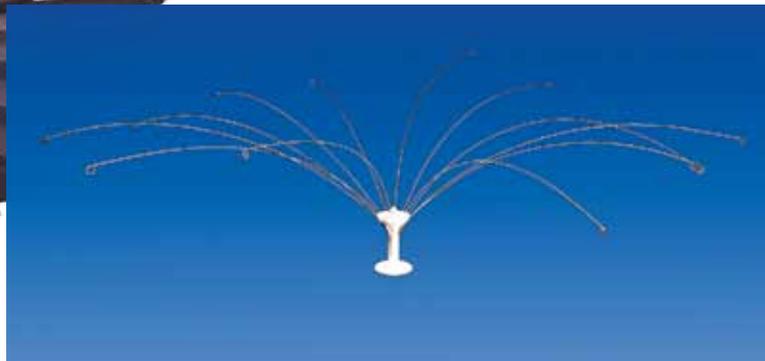

- Stainless Steel “Arms” move with the breeze, which deters birds from landing and causing damage.
- Bird•B•Gone Bird Spider has no moving parts in the base unit, which makes it extra sturdy and stable. **NO ASSEMBLY REQUIRED!**
- Convenient / FREE attachments make Bird Spider Adaptable!
- Available in Four Widths! 2’,4’,6’ and 8’ Diameters.
- Super Easy to Install...and Maintenance Free!

The Bird Spider is Ideal For:

- Signs
- Parking Lot Lights
- Street Lights
- A.C. Units
- Rooftops
- Boats
- Building Maintenance
- AND MORE!

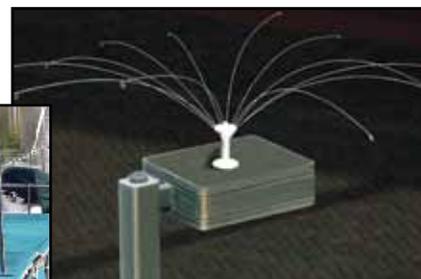

BIRD•B•GONETM INC.

PH: 949-472-3122 • FAX: 949-472-3116


E-mail: nobirds@birdbgone.com

www.birdbgone.com

For Customer Support,
Call **1-800-392-6915**

INSTALLATION INSTRUCTIONS FOR BIRD•B•GONE BIRD SPIDER


- 1.** Ensure mounting surface is clean of bird feces and debris before installing any bird deterrent, including the Bird Spider.
- Use Bird-B-Gone Disinfectant or appropriate disinfectant to prepare the surface.

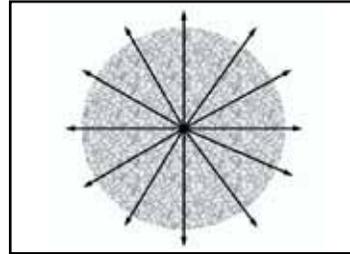

Bird Spider Arm "tips" should overhang mounting surface by at least 2".

- 2.** Select the appropriate Bird Spider (4' or 8') depending on the surface of coverage.
- It is important that the "tips" of the arms extend several inches over the outside surface(s).

- 4.** Bird Spider Arm Tips Should be no more than 2-3" above mounting surface.

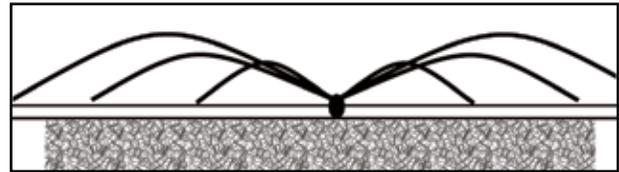

- 3.** Stainless Steel arms must have room to move with the air.
- Do not mount Bird Spider in an area where the arms will be suppressed from movement or blocked by walls.

- 5.** If the Bird Spider requires gluing for the installation, the PVC adapter must be used.

- **DO NOT GLUE THE BOTTOM OF THE BASE UNIT WITHOUT INSTALLING THE PVC BASE.**
- Use Bird-B-Gone Adhesives, available direct from Bird-B-Gone

BOAT ADAPTATION:


Bird Spider Boat Base:

- Attach the Bird Spider Base directly to the Boat Base with the screws supplied.
 - **Do not mount onto the PVC supplied attachment first.**
- Each of the four "corners" of the Bird Spider Boat Base has holes.
- This makes it easy to "bungee" or tie down the base to the canopy top, cover, etc. ... and also allows for easy removal of this ideal boat protective device!

Bird Spider Sandbag Base:

- Use the Sandbag Base on Boats where the Bird Spider Boat Base is not appropriate (i.e. Bimini Tops and larger areas).
- Attach the Bird Spider Base directly to the Sandbag Base with the screws supplied with Sandbag Base. Follow instructions supplied with screws. **(Screws used for the PVC attachment will not work with the Sandbag Base.)**
 - Do not mount onto the PVC supplied attachment first
- Although the Bird Spider Sandbag Base is weighted, it should always be secured to the boat.
- High winds or extreme shifts in weather could remove the Sand Bag Base and cause damage if it is not properly secured.

- 6.** If installing more than one Bird Spider in a row, be sure that they are installed 6-8" from arm tip-to-arm tip (not base-to-base).

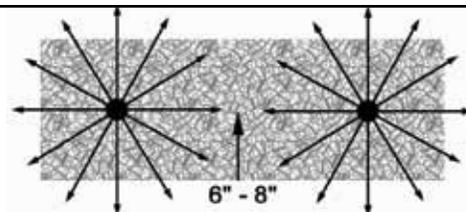

Any Questions Regarding
Bird Spider Installation:
Call **1-800-392-6915**

Bird•B•Gone, Inc.

Ph. 949-472-3122

FAX: 949-472-3116

Email: nobirds@birdbgone.com

www.birdbgone.com

